

Connect Archer and FieldGenius with Bluetooth

1. Start the Bluetooth radio on the Archer.
2. Open the Bluetooth Settings screen.




3. In the Bluetooth Settings screen click on the Device tab and select “New Partnership”.



- You Archer will now start searching for your Bluetooth instrument. When it appears in the list, **select it** and then press the **Next** button.




- Depending on how the instrument is configured, you might be prompted for a passkey. Enter it now.

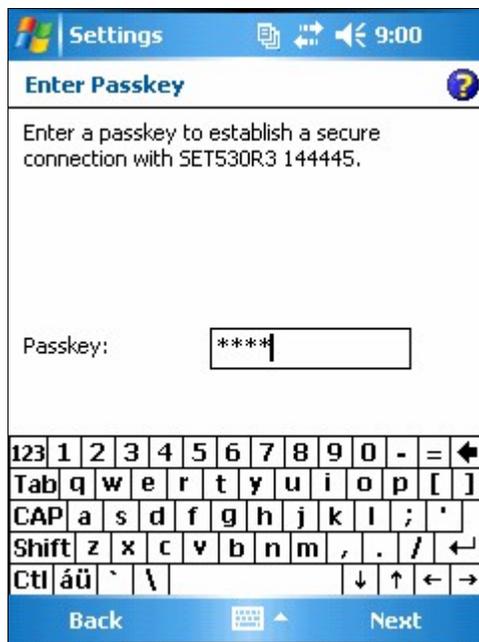

- You will then need to select the service type you want to use, on our instrument it the Serial Port service. Select it, then press finish to complete the setup.




- The last thing you need to do is setup the incoming port that the Archer's Bluetooth radio will use. Select "New Outgoing Port".

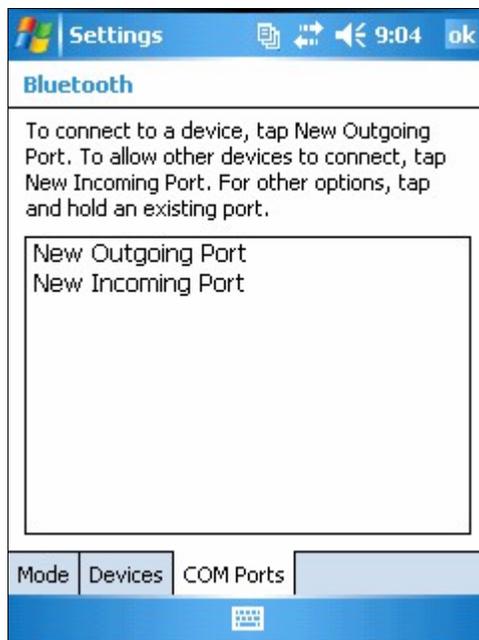

- You should now see the partnership that you created with the instrument, select it from the list, then press **Next**.



- Select a COM Port to use. In our example we used COM 6.

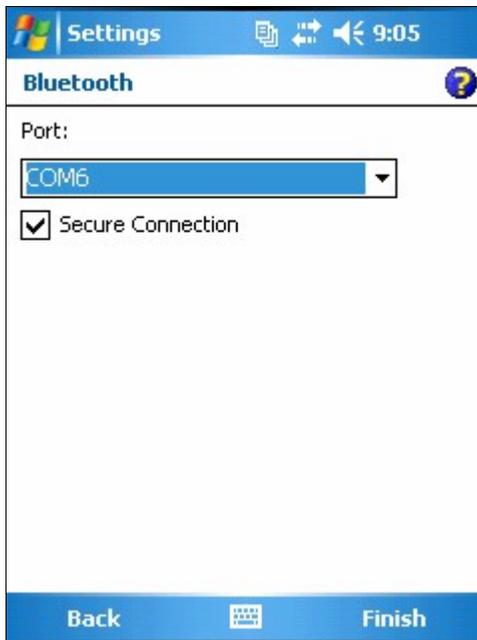

10. You should now see your partnership in the list of available COM ports.

